

MMMX - Mexico City - Licenciado Benito Juarez Intl

Airport details

State	Distrito Federal
Country	Mexico
Region	MM
Elevation	7313ft (2229m)
Timezone	GMT -6
Coordinates	19.43640, -99.07198
Type	land
ICAO code	MMMX
IATA code	MEX
FAA code	n/a

Runway info

Runway 05L / 23R	
length	3960m (12992ft)
bearing	61° / 241°
width	45m (148ft)
surface	asphalt
displacement threshold	485m (1591ft) / 506m (1660ft)
blast zone	0m (0ft) / 55m (180ft)
Runway 05R / 23L	
length	3988m (13084ft)
bearing	61° / 241°
width	45m (148ft)
surface	asphalt
displacement threshold	455m (1493ft) / 80m (262ft)
blast zone	255m (837ft) / 61m (200ft)

Communication

Licenciado Benito Juarez Intl ATIS	127.650
Licenciado Benito Juarez Intl ATIS	127.650
Licenciado Benito Juarez Intl ATIS	127.650
Licenciado Benito Juarez Intl ATIS	127.650
Licenciado Benito Juarez Intl MEXICO	122.100
CLNC DEL	
Licenciado Benito Juarez Intl MEXICO	122.100
CLNC DEL	
Licenciado Benito Juarez Intl MEXICO	122.100
CLNC DEL	
Licenciado Benito Juarez Intl MEXICO	122.100
CLNC DEL	

Licenciado Benito Juarez Intl GND SOUTHWEST	122.800
Licenciado Benito Juarez Intl GND SOUTH	121.000
Licenciado Benito Juarez Intl GND NORTH	121.850
Licenciado Benito Juarez Intl GND NORTH	121.850
Licenciado Benito Juarez Intl GND SOUTH	121.000
Licenciado Benito Juarez Intl GND SOUTHWEST	122.800
Licenciado Benito Juarez Intl GND SOUTHWEST	122.800
Licenciado Benito Juarez Intl GND SOUTH	121.000
Licenciado Benito Juarez Intl GND NORTH	121.850
Licenciado Benito Juarez Intl GND SOUTHWEST	122.800
Licenciado Benito Juarez Intl GND NORTH	121.850
Licenciado Benito Juarez Intl GND SOUTH	121.000
Licenciado Benito Juarez Intl MEXICO TWR	118.550
Licenciado Benito Juarez Intl MEXICO TWR	118.700
Licenciado Benito Juarez Intl MEXICO TWR	118.550
Licenciado Benito Juarez Intl MEXICO TWR HELOS	118.150
Licenciado Benito Juarez Intl MEXICO TWR	118.700
Licenciado Benito Juarez Intl MEXICO TWR HELOS	118.150
Licenciado Benito Juarez Intl MEXICO TWR	118.550
Licenciado Benito Juarez Intl MEXICO TWR HELOS	118.150
Licenciado Benito Juarez Intl MEXICO TWR	118.700
Licenciado Benito Juarez Intl MEXICO TWR	118.550
Licenciado Benito Juarez Intl MEXICO TWR HELOS	118.150
Licenciado Benito Juarez Intl MEXICO TWR	118.700
Licenciado Benito Juarez Intl MEXICO ARR EAST	120.500
Licenciado Benito Juarez Intl MEXICO ARR WEST	129.100

Licenciado Benito Juarez Intl MEXICO 120.500
 ARR EAST
 Licenciado Benito Juarez Intl MEXICO 129.100
 ARR WEST
 Licenciado Benito Juarez Intl MEXICO 129.100
 ARR WEST
 Licenciado Benito Juarez Intl MEXICO 120.500
 ARR EAST
 Licenciado Benito Juarez Intl MEXICO 120.500
 ARR EAST
 Licenciado Benito Juarez Intl MEXICO 129.100
 ARR WEST
 Licenciado Benito Juarez Intl MEXICO 129.100
 DEP WEST
 Licenciado Benito Juarez Intl MEXICO 120.500
 DEP EAST
 Licenciado Benito Juarez Intl MEXICO 129.100
 DEP WEST
 Licenciado Benito Juarez Intl MEXICO 120.500
 DEP EAST
 Licenciado Benito Juarez Intl MEXICO 129.100
 DEP WEST
 Licenciado Benito Juarez Intl MEXICO 129.100
 DEP WEST
 Licenciado Benito Juarez Intl MEXICO 120.500
 DEP EAST
 Licenciado Benito Juarez Intl MEXICO 120.500
 DEP EAST

Approach frequencies

ILS-cat-I	23L	109.7	18.00mi
ILS-cat-I	05R	109.1	18.00mi
3.1° GS	05R	109.1	18.00mi
3° GS	23L	109.7	18.00mi

Nearby beacons

code	identifier	dist	bearing	frequency
MEX	MEXICO VOR/DME	0.2	60.1°	115.90
SMO	SAN MATEO VOR/DME	11.3	307.3°	112.10
TPX	TEPEXPAN NDB	12.2	32.5°	359
SLM	SANTA LUCIA VOR/DME	18.5	7.8°	116.60
TLC	TOLUCA VOR/DME	28.3	258°	114.30
CVJ	CUERNAVACA VOR/DME	38.3	197.8°	113.90
APN	APAN VOR/DME	39.9	73.3°	114.80
CUA	CUAUTLA VOR/DME	40.2	165.2°	116.30
PTJ	PASTEJE VOR/DME	42.9	286°	114.50
PBC	PUEBLA VOR/DME	43	111.4°	115.20
TEQ	TEQUESQUITENGO VOR/DME	46.8	193.5°	113.10

PCA PACHUCA VOR/DME 47.1 29.1° 112.70

Departure and arrival routes

Transition altitude 18500ft
Transition level 19500ft

SID end points	distance	outbound direction
----------------	----------	--------------------

RW05 (ALL)

IKLA1A	60.7	10°
NOX01A	61.0	81°
UKUN1A	59.9	90°
ILET1A	60.4	99°
TEVO1A	61.1	172°
ULEB1A	65.9	249°
OVAG1A	62.3	257°
SEBO1A	60.3	265°
ATUR1A	61.4	350°
AXIR1A	60.2	360°

RW23 (ALL)

IKLA1B	60.7	10°
NOX01B	61.0	81°
UKUN1B	59.9	90°
ILET1B	60.4	99°
TEVO1B	61.1	172°
ULEB1B	65.9	249°
OVAG1B	62.3	257°
SEBO1B	60.3	265°
ATUR1B	61.4	350°
AXIR1B	60.2	360°

STAR starting points	distance	inbound direction
----------------------	----------	-------------------

RW05 (ALL)

ESPO1A	60.2	47°
DARA1A	60.5	138°
ENAG1A	61.2	237°
LARL1A	60.2	314°

RW23 (ALL)

ESPO1B	60.2	47°
DARA1B	60.5	138°
ENAG1B	61.2	237°
LARL1B	60.2	314°

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only