

MMTM - Tampico - General Francisco Javier Mina

Airport details

State	Tamaulipas
Country	Mexico
Region	MM
Elevation	80ft (24m)
Timezone	GMT -6
Coordinates	22.29212, -97.86932
Type	land
ICAO code	MMTM
IATA code	TAM
FAA code	n/a

Runway info

Runway 13 / 31	
length	2560m (8399ft)
bearing	143° / 323°
width	42m (138ft)
surface	asphalt
blast zone	71m (233ft) / 98m (322ft)
Runway 18 / 36	
length	1214m (3983ft)
bearing	191° / 11°
width	30m (98ft)
surface	asphalt
blast zone	7m (23ft) / 116m (381ft)
Runway 09 / 27	
length	1192m (3911ft)
bearing	99° / 279°
width	30m (98ft)
surface	asphalt
blast zone	7m (23ft) / 0m (0ft)

Communication

General Francisco Javier Mina	122.450
TAMPICO Information	
General Francisco Javier Mina	122.450
TAMPICO Information	
General Francisco Javier Mina	122.450
TAMPICO Information	
General Francisco Javier Mina	122.450
TAMPICO Information	

General Francisco Javier Mina TAMPICO TWR	118.300
General Francisco Javier Mina TAMPICO TWR	118.300
General Francisco Javier Mina TAMPICO TWR	118.300
General Francisco Javier Mina TAMPICO TWR	118.300
General Francisco Javier Mina TAMPICO APP	120.300
General Francisco Javier Mina TAMPICO APP	120.300
General Francisco Javier Mina TAMPICO APP	120.300
General Francisco Javier Mina TAMPICO APP	120.300

Approach frequencies

ILS-cat-I	13	109.3	18.00mi
3° GS	13	109.3	18.00mi

Nearby beacons

code	identifier	dist	bearing	frequency
TAM	TAMPICO VOR/DME	0.3	111.8°	117.50
TMN	TAMUIN VOR/DME	54.3	254.8°	113.30

Departure and arrival routes

Transition altitude	18500ft
Transition level	19500ft

SID end points	distance	outbound direction
RW13		
ONBU3A	25.3	96°
ANIL3A	25.3	151°
NOTO2A	25.2	166°
LETI2A	25.0	200°
RW18		
ONBU3B	25.3	96°
ANIL3B	25.3	151°
NOTO2B	25.2	166°
LETI2B	25.0	200°
IPTU2A	24.7	255°
RW31		
MAPI2A	24.9	6°
EMOR2A	24.9	14°

RW36	AVSE3A	25.0	35°
	IPTU2B	24.7	255°
	TAKL2A	24.6	290°
	JERE2A	24.7	323°
	XORM2A	24.7	339°
	URVO2A	24.8	355°
	MAPI2B	24.9	6°
	EMOR2B	24.9	14°
	AVSE3B	25.0	35°
	TAKL2B	24.6	290°
	JERE2B	24.7	323°
	XORM2B	24.7	339°
	URVO2B	24.8	355°

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only