

SERO - Santa Rosa

Airport details

State	El Oro
Country	Ecuador
Region	SE
Elevation	167ft (51m)
Timezone	GMT -5
Coordinates	-3.43611, -79.98389
Type	land
ICAO code	SERO
IATA code	ETR
FAA code	n/a

Runway info

Runway 07 / 25	
length	2473m (8114ft)
bearing	68° / 248°
width	45m (148ft)
surface	asphalt
Runway 09 / 27	
length	913m (2995ft)
bearing	91° / 271°
width	18m (59ft)
surface	asphalt

Communication

Santa Rosa Santa Rosa Tower	128.550
Santa Rosa Santa Rosa Tower	128.550
Santa Rosa Santa Rosa Tower	128.550
Santa Rosa Santa Rosa Tower	128.550

Approach frequencies

ILS-cat-I	07	111.1	18.00mi
3° GS	07	111.1	18.00mi

Nearby beacons

code	identifier	dist	bearing	frequency
SRV	SANTA ROSA VOR/DME	1.6	246.5°	116.60
MHV	MACHALA VOR/DME	8.8	15.7°	112.10
BES	TUMBES VOR/DME	25.1	255°	112.90

LOJ	LOJA (LA TOMA) NDB	49.9	132.1°	414
-----	--------------------	------	--------	-----

Departure and arrival routes

Transition altitude	3000ft
Transition level	3000ft

SID end points		distance	outbound direction
RW07			
	ANDEL2	19.2	2°
RW25			
	ANDE2A	19.2	2°

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only